

Model Number

UB300-18GM40-E5-V1-Y242981

Single head system

Features

- · Short design, 40 mm
- Function indicators visible from all directions
- Switch output
- 5 different output functions can be set
- Program input
- Temperature compensation

Diagrams

Characteristic response curve

Distance Y [mm] 100 50 1 2 -50 -100 150 200 250 300 350 50 100 400 450 500 Distance X [mm] Y Х Curve 1: flat surface 100 mm x 100 mm Curve 2: round bar, Ø 25 mm

Technical data General specifications Sensing range Adjustment range Unusable area Standard target plate Transducer frequency Response delay Indicators/operating means LED yellow I ED red **Electrical specifications** Operating voltage UB No-load supply current I₀ Input Input type Output Output type Rated operating current Ie Default setting Voltage drop U_d Repeat accuracy Switching frequency Range hysteresis H Temperature influence Ambient conditions Ambient temperature Storage temperature Mechanical specifications Connection type Protection degree Material Housing Transducer

Mass Compliance with standards and directives Standard conformity Standards 30 ... 300 mm 50 ... 300 mm 0 ... 30 mm 100 mm x 100 mm approx. 390 kHz approx. 30 ms

indication of the switching state flashing: program function object detected solid red: Error red, flashing: program function, object not detected

10 ... 30 V DC , ripple 10 $\%_{\rm SS}$ \leq 20 mA

1 program input operating distance 1: -U_B ... +1 V, operating distance 2: +6 V ... +U_B input impedance: > 4,7 k\Omega program pulse: \geq 1 s

1 switch output E5, PNP NO/NC, programmable 200 mA , short-circuit/overload protected Switch point A1: 300 mm Switch point A2: 50 mm , NC contact \leq 3 V \leq 1 V \leq 1 Hz 1 % of the set operating distance

± 1.5 % of full-scale value

-25 ... 70 °C (-13 ... 158 °F) -40 ... 85 °C (-40 ... 185 °F)

Connector M12 x 1 , 4-pin IP67

brass, nickel-plated epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT 25 g

EN 60947-5-2:2007 IEC 60947-5-2:2007

Approvals and certificates

UL approval CSA approval cULus Listed, General Purpose cCSAus Listed, General Purpose

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group USA: + www.pepperl-fuchs.com fa-info@us

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



object distance

A2

A1

Additional Information

Programmable output modes 1. Window mode, normally open mode

A1

2. Window mode, normally closed mode

A2

3. One switch point, normally open mode

A2

4. One switch point, normally closed mode

A1

5. A1 -> ∞ , A2 -> ∞ : Object presence detection mode Object detected: Switch output closed No object detected: Switch output open


A1 < A2:

A2 < A1:

A1 -> ∞:


A2 -> ∞:

Dimensions

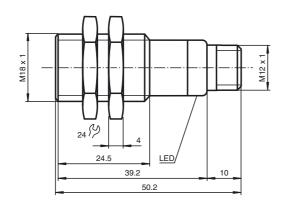

Electrical Connection

Standard symbol/Connections: (version E5, pnp) 1 (BN)

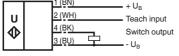

Core colours in accordance with EN 60947-5-2.

Pinout

Connector V1



Accessories

UB-PROG2 Programming unit

OMH-04

Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

BF 18 Mounting flange, 18 mm

BF 18-F

Mounting flange with dead stop, 18 mm

BF 5-30

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

V1-G-2M-PVC Female cordset, M12, 4-pin, PVC cable

V1-W-2M-PUR Female cordset, M12, 4-pin, PUR cable

Adjusting the switching points

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com fa-info@us.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sq.pepperl-fuchs.com



Date of issue: 2013-07-31 242981_eng.xml Release date: 2013-06-24 12:41

The ultrasonic sensor features a switch output with two teachable switching points. These are set by applying the supply voltage $-U_B$ or $+U_B$ to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with $-U_B$, A2 with $+U_B$.

Five different output functions can be set

- 1. Window mode, normally-open function
- 2. Window mode, normally-closed function
- 3. one switching point, normally-open function
- 4. one switching point, normally-closed function
- 5. Detection of object presence

TEACH-IN window mode, normally-open function

- Set target to near switching point
- TEACH-IN switching point A1 with -UB
- Set target to far switching point
- TEACH-IN switching point A2 with +UB

TEACH-IN window mode, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A2 with +U_B
- Set target to far switching point
- TEACH-IN switching point A1 with -UB

TEACH-IN switching point, normally-open function

- Set target to near switching point
- TEACH-IN switching point A2 with +UB
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -UB

TEACH-IN switching point, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A1 with -UB
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A2 with +UB

TEACH-IN detection of objects presence

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -U_B
- TEACH-IN switching point A2 with +U_B

LED Displays

Displays in dependence on operating mode	Red LED	Yellow LED
TEACH-IN switching point:		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	On	off
Normal operation	off	Switching state
Fault	on	Previous state

Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

