


Single head system



Dimensions

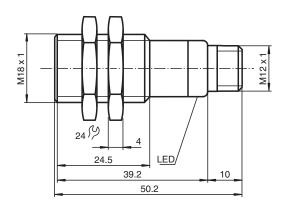

Technical Data

| General specifications | |
|----------------------------|-----------------|
| Sensing range | 50 800 mm |
| Adjustment range | 70 800 mm |
| Dead band | 0 50 mm |
| Standard target plate | 100 mm x 100 mm |
| Transducer frequency | approx. 255 kHz |
| Response delay | approx. 100 ms |
| Indicators/operating means | |
| LED green | Power on |

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com



Ultrasonic sensor

| Technical Data | | |
|--|----------------|---|
| | | |
| LED yellow | | indication of the switching state flashing: program function object detected |
| LED red | | solid red: Error red, flashing: program function, object not detected |
| Electrical specifications | | |
| Operating voltage | U_B | 10 30 V DC , ripple 10 % _{SS} |
| No-load supply current | I ₀ | ≤ 20 mA |
| Input | | |
| Input type | | 1 program input operating distance 1: -U _B +1 V, operating distance 2: +6 V +U _B input impedance: > 4,7 kΩ program pulse: ≥ 1 s |
| Output | | |
| Output type | | 1 switching output E5, PNP NO/NC, programmable |
| Rated operating current | l _e | 200 mA , short-circuit/overload protected |
| Default setting | | Switch point A1: 800 mm , Switch point A2: 70 mm NC contact |
| Voltage drop | U_d | ≤3V |
| Repeat accuracy | | ≤1 % |
| Switching frequency | f | ≤4 Hz |
| Range hysteresis | Н | 1 % of the set operating distance |
| Temperature influence | | ± 1.5 % of full-scale value |
| Compliance with standards and directives | | |
| Standard conformity | | |
| Standards | | EN IEC 60947-5-2:2020 IEC 60947-5-2:2019 |
| Approvals and certificates | | |
| UL approval | | cULus Listed, Class 2 Power Source |
| CCC approval | | CCC approval / marking not required for products rated ≤36 V |
| Ambient conditions | | |
| Ambient temperature | | -25 70 °C (-13 158 °F) |
| Storage temperature | | -40 85 °C (-40 185 °F) |
| Mechanical specifications | | |
| Connection type | | Connector plug M12 x 1 , 4-pin |
| Housing diameter | | 18 mm |
| Degree of protection | | IP67 |
| Material | | |
| Housing | | brass, nickel-plated |
| Transducer | | epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT |
| Mass | | 25 g |

Connection


Standard symbol/Connections: (version E5, pnp)

| | 1(| BN) | | + U _B |
|-----------------|-----|-----|----------|----------------------|
| U | 2 (| WH) | | Teach input |
| $\mathbf{\Phi}$ | 4 (| BK) | _ | Switch output |
| • | 3 (| BU) | <u> </u> | - U _B |

Core colours in accordance with EN 60947-5-2.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

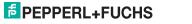

Connection Assignment




Wire colors in accordance with EN 60947-5-2


| 1 | BN | (brown) |
|--------|----------|-------------------|
| 2 3 | WH BU | (white) (blue) |
| 4 | BK | (black) |

Characteristic Curve

Characteristic response curve

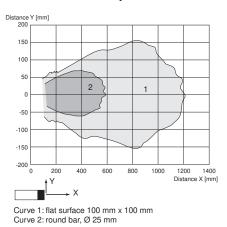


Programmable output modes

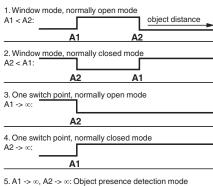

5. A1 -> ∞ , A2 -> ∞ : Object presence detection mode Object detected: Switch output closed No object detected: Switch output open

UB-PROG2 Programming unit OMH-04 Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

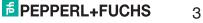

| Accessories | | | |
|-------------------|-------------|---|--|
| | BF 18 | Mounting flange, 18 mm | |
| | BF 18-F | Plastic mounting adapter, 18 mm | |
| 100 100 100 | BF 5-30 | Universal mounting bracket for cylindrical sensors with a diameter of 5 30 mm | |
| ø / | V1-G-2M-PVC | Female cordset single-ended M12 straight A-coded, 4-pin, PVC cable grey | |
| « | V1-W-2M-PUR | Female cordset single-ended M12 angled A-coded, 4-pin, PUR cable grey | |

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

4

Teach-In

Adjusting the switching points

The ultrasonic sensor features a switch output with two teachable switching points. These are set by applying the supply voltage $-U_B$ or $+U_B$ to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with $-U_B$, A2 with $+U_B$.

Five different output functions can be set

- 1. Window mode, normally-open function
- 2. Window mode, normally-closed function
- 3. one switching point, normally-open function
- 4. one switching point, normally-closed function
- 5. Detection of object presence

TEACH-IN window mode, normally-open function

- Set target to near switching point
- TEACH-IN switching point A1 with -U_B
- Set target to far switching point
- TEACH-IN switching point A2 with +U_B

TEACH-IN window mode, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A2 with +U_B
- Set target to far switching point
- TEACH-IN switching point A1 with -U_B

TEACH-IN switching point, normally-open function

- Set target to near switching point
- TEACH-IN switching point A2 with +U_B
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -U_B

TEACH-IN switching point, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A1 with -U_B
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A2 with +U_B

TEACH-IN detection of objects presence

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -U_B
- TEACH-IN switching point A2 with +U_B

LED Displays

| Displays in dependence on operating mode | Red LED | Yellow LED |
|--|---------|-----------------|
| TEACH-IN switching point: | | |
| Object detected | off | flashes |
| No object detected | flashes | off |
| Object uncertain (TEACH-IN invalid) | On | off |
| Normal operation | off | Switching state |
| Fault | on | Previous state |

Installation Conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information