

Vibration sensor VIM82PU-S1V32-20E-I422V19

- Suitable for SIL2/Pld applications
- Rugged stainless steel housing
- Vibration velocity in mm/s via root mean square formation (rms)
- 2 relays outputs for safety functions with adjustable switching tresholds, allowing pre- and main alarm

Vibration sensor with safety function both for the analog current output and for the 2 relay outputs with adjustable swichting thresholds




Function


The vibration sensor determines the vibration quantity using rms (root mean square) averaging. This form of quadratic averaging or pre-filtering enables precise trend statements about the condition of the application.

The vibration sensor has a safety integrity level (SIL 2) for usage in functional safety applications.

For monitoring tasks within the scope of functional safety, 2 relay outputs with adjustable switching thresholds are available. With simultaneous evaluation of both relay outputs by a controller, monitoring of a pre-alarm and main alarm thus is possible, e.g. as part of Condition Monitoring.

Dimensions

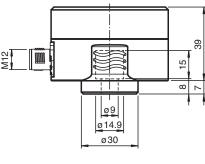

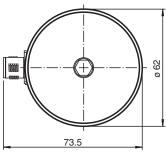

Technical Data

General specifications

Type Measuring technology Series Vibration sensor MEMS

USA: +1 330 486 0001 Germar fa-info@us.pepperl-fuchs.com fa-info@u

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com



1

VIM82PU-S1V32-20E-I422V19

Vibration sensor

	Vibration velocity
	,
v-	0 32 mm/s
rms	
	± 0.1 mm/s (calibration point: 90% of the measuring range; 159.2 Hz) Complies with the tolerance requirements of DIN ISO 2954 for measurement range greater than 8 mm/s
	< 5 % of the partial lateral acceleration, which acts exactly 90° to the measuring axis
	10 1000 Hz
	for v-rms: 2 s
	SIL 2
	PL d
	Cat. 2
	329 a
	10 a
	min. 90 %
	6 LEDs for operating states
	4 rotary switches and 1 push button for programming
	external fuse is required: 3 A , semi-time-lag , 30 V DC
U _B	24 V DC + 7 % / - 10 %
-	max. 100 mA
	2.6 W
t _v	15 s (initially self-test functions are executed before safe measured values are available at the output)
	up to 2 kV
	relay
	Normally open (NO)
	max. 30 V DC
	max. 1 A
	relay
	Normally open (NO)
	max. 30 V DC
	max. 1 A
	analog output, current output of the vibration variable
	4 20 mA
	≤ 500 Ω
	DIN EN 60529, IP66, IP67
	DIN EN 60068-2-27, 60 g, 6 ms
	DIN EN 60068-2-6, 16.5 g, 10 1000 Hz
	DIN EN IEC 61508 , SIL 2 EN ISO 13849 , PL d
	E468231 cULus Listed, Class III Power Source and limited energy , if UL marking is marked on the product. For use in NFPA 70 Applications only.
	adapters providing field wiring on request
	rms

Ambient conditions

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
USA: +1 330 486 0001
General General

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

Vibration sensor

Technical Data

Ambient temperature	-40 60 °C (-40 140 °F)
Measuring head temperature	-40 85 °C (-40 185 °F) directly at the mounting point
Storage temperature	-40 60 °C (-40 140 °F)
Mechanical specifications	
Connection type	plug
Housing material	Stainless steel 1.4305 / AISI 303
Degree of protection	IP66 / IP67 only in connected state and correctly mounted housing cover
Connector	
Threading	M12
Number of pins	8
Mass	approx. 500 g
Dimensions	
Height	46 mm
Width	62 mm
Length	73.5 mm
General information	
Scope of delivery	1 x allen head screw M8 x 20 1 x spring washer M8 1 x seal label

Connection

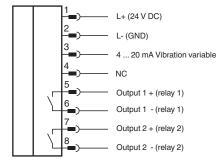

Accessories

Accessories for this product can be found on the internet at www.pepperl-fuchs.com.

Installation

Further Documentation

The sensor manual is also available as detailed overall documentation. Among other things, installation, grounding concepts and mounting are described there in detail.

You can access the manual via the product detail page at www.pepperl-fuchs.com.

Note

The correct electrical connection and the selection of the appropriate grounding concept are crucial for malfunction-free operation of the sensor. For detailed information you may refer to the manual of the sensor.


Refer to "General Notes Relating to Pepperl+Fuchs Product Information"



Vibration sensor

Programming

Adjustable relay outputs

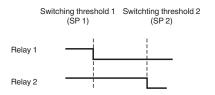

critical state = pre-alarm from SP1/main alarm from SP2 = relay is open = like de-energized state

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

4