

# Multiturn absolute encoder

## PVM58

- Industrial standard housing Ø58 mm
- PROFIBUS interface
- 30 Bit multiturn
- Speed transfer
- Extended scaling functions
- Programmable limit switches
- Commissioning mode
- Servo or clamping flange



#### **Function**


This series of PROFIBUS rotary encoders is based on the modern fast technology of singleturn sampling and the mechanical gear box of the multiturn unit. The absolute encoder corresponds to the PROFIBUS profile for encoders, order no. 3.062. Operation is supported based on Class 1 and Class 2.

For operation based on Class 1, position data and diagnostic data bytes 1 ... 16 are available. In addition, the direction of the code can be selected as either cw ascending (clockwise rotation, code course ascending) or cw descending (clockwise rotation, code course descending). If the rotary encoder is operated according to Class 2, additional functions to those from Class 1 are available. These include scaling of the resolution per revolution and the overall resolution, as well as the preset function. In addition, expanded diagnostic reporting is supported. Besides, the rotary encoder offers extended functionalities such as speed transfer, extended scaling functions, programmable limit switches and a commissioning mode.

The removable connecting hood contains a slide switch for setting the terminating resistor and the rotary switches for setting the address. Assign a fixed address and bus termination to the encoder with this switches.


The device is designed for shaft mounting and is available in servo flange or clamping flange design.

### **Dimensions**

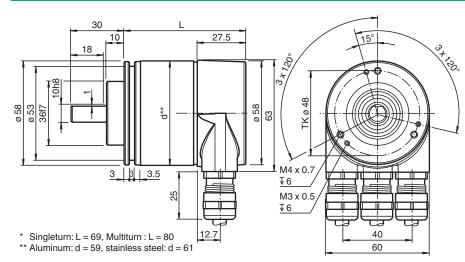

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

#### **Dimensions**

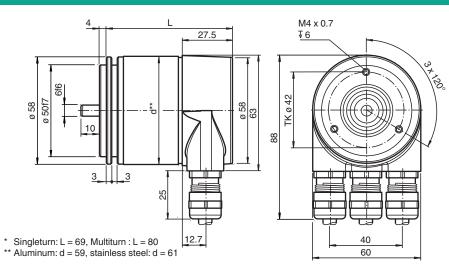

### **Technical Data**

General specifications		
Detection type		photoelectric sampling
Device type		Multiturn absolute encoder
Electrical specifications		
Operating voltage	$U_B$	10 30 V DC
No-load supply current	I <sub>0</sub>	max. 230 mA at 10 V DC max. 100 mA at 24 V DC
Power consumption	P <sub>0</sub>	max. 2.5 W
Time delay before availability	t <sub>v</sub>	< 1000 ms
Linearity		$\pm$ 2 LSB at 16 Bit, $\pm$ 1 LSB at 13 Bit, $\pm$ 0,5 LSB at 12 Bit
Output code		binary code
Code course (counting direction)		programmable, cw ascending (clockwise rotation, code course ascending) cw descending (clockwise rotation, code course descending)
Interface		
Interface type		PROFIBUS
Resolution		
Single turn		up to 16 Bit
Multiturn		14 Bit
Overall resolution		up to 30 Bit
Transfer rate		0.0096 12 MBit/s
Standard conformity		PNO profile 3.062, RS-485
Connection		
Terminal compartment		in removable housing cover
Standard conformity		
Degree of protection		DIN EN 60529, IP65 IP66, IP67 (with shaft seal)
Climatic testing		DIN EN 60068-2-30 , no moisture condensation
Emitted interference		EN 61000-6-4:2007
Noise immunity		EN 61000-6-2:2005
Shock resistance		DIN EN 60068-2-27, 100 g, 6 ms
Vibration resistance		DIN EN 60068-2-6, 10 g, 10 2000 Hz
Approvals and certificates		
UL approval		cULus Listed, General Purpose, Class 2 Power Source
Ambient conditions		
Operating temperature		-40 85 °C (-40 185 °F)
Storage temperature		-40 85 °C (-40 185 °F)
Mechanical specifications		

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Release date: 2023-02-14 Date of issue: 2023-02-14 Filename: t49153\_eng.pdf

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



**DEPPERL+FUCHS** 2

#### **Technical Data** Material housing: powder coated aluminum flange: aluminum shaft: stainless steel Combination 1 Combination 2 (Inox) housing: stainless steel flange: stainless steel shaft: stainless steel approx. 600 g (combination 1) approx. 1200 g (combination 2) Mass Rotational speed max. 12000 min -1 Moment of inertia 30 gcm<sup>2</sup> Starting torque $\leq$ 3 Ncm (version without shaft seal) Shaft load Axial 40 N Radial 110 N

### Accessories

0	9203	Angled flange
C COM CON	AH 58-B1CA-2BW	Connection cover
	9310-3	Synchro clamping element
	9300	Mounting bracket for servo flange
<b>()</b>	KW-10/10	Helical coupling
<b>i</b>	KW-6/10	Helical coupling
<b>()</b>	KW-6/6	Helical coupling
	KW-6/8	Helical coupling
	9401 10*10	Spring steel coupling
	9401 10*12	Spring steel coupling
	9401 6*10	Spring steel coupling
	9401 6*6	Spring steel coupling
	9402 6*6	Spring steel coupling
	9404 10*10	Spring disk coupling

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Acces	sories	
	9404 6*6	Spring disk coupling
<b>S</b>	9409 10*10	Bellows coupling
<b>S</b>	9409 6*10	Bellows coupling
<b>S</b>	9409 6*6	Bellows coupling
<b>S</b>	9409 6*8	Bellows coupling
I	9410 10*10	Precision coupling
()	9410 6*6	Precision coupling
	MBT-36ALS	Spring-loaded mounting bracket with a diameter of 36 mm

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 Get

 www.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com


4


### Connection

Terminal	Explanation
$\bot$	Ground connection for power supply
B (left)	Data line B (pair 1), Bus In
A (left)	Data line A (pair 1), Bus In
(-)	0 V
(+)	10 V 30 V
B (right)	Data line B (pair 2), Bus Out
A (right)	Data line A (pair 2), Bus Out
(-)	0 V
(+)	10 V 30 V
	The supply lines only have to be connected once (regardless to which terminal). The outgoing bus is being uncoupled while the terminal resistor is on.

The arrangement of the terminals is shown in the section commissioning.


### Configuration

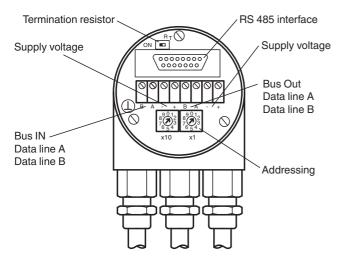

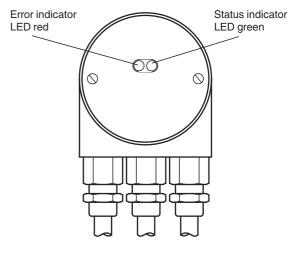

#### Adjusting the participant address

The participant address can be adjusted with the rotary switches. The address can be defined between 1 and 99, and may only be assigned once.

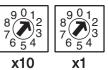

#### Adjusting the termination resistor

The terminating resistor  $R_T$  (220  $\Omega) can be connected to the circuit by means of the switch:$ 



Refer to "General Notes Relating to Pepperl+Fuchs Product Information"


Pepperl+Fuchs Group www.pepperl-fuchs.com

#### **ALED-indicators**

LED red	LED green	Meaning	
off	off	No voltage supply	
on	on	Encoder ready, no configuration data received.	
		possible reasons:	
		- wrong address adjusted	
		- wrong bus wiring	
on	flashing	Parameterising or configuration error. Encoder receives data of incorrect length or inconsistant data.	
		possible reason:	
		- adjusted encoder resolution exceeds	
flashing	on	Encoder ready, no communication with master (i.e. wrong address setting)	
on	off	Data timeout (> 40 s). (i.e. data lines interrupted)	
off	on	Normal operation, Data Exchange Mode	
off	flashing	Installation Mode in Data Exchange Mode.	

### **Function Principle**

Principle of data transmission

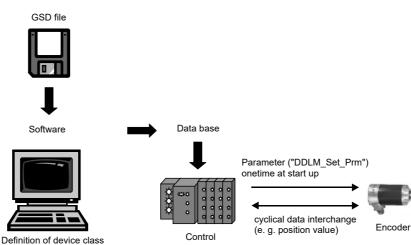

### Parameterization

#### Parameter table encoder classes P+F 2.1 and P+F 2.2

enter parameter

Octet number (Byte)	Parameter	Bit number
18	PROFIBUS standard parameters	
9	Direction of rotation	0
	Class 2 functionality	1
	Commissioning Diagnostics	2
	Scaling function	3
	Reserved	4
	Reserved	5
	Activate manufacturer specific parameters (Octet 26)	6
	Reserved	7
10 13	Desired measuring steps (reference: Octet 26, Bit 0 and 1)	
14 17	Overall resolution	
18 25	Reserved	
26	Reference for desired measuring steps	0
		1
	Activate commissioning mode	2
	Reduced diagnosis	3
	Reserved	4
	Activate lower software limit switch	5
	Activate upper software limit switch	6

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

6

#### Multiturn absolute encoder

	Activation of the parameters from Octet 27	7
27 30	Lower limit switch	
31 34	Upper limit switch	
35 38	Physical measuring steps	
39	Reserved	0
	Rotary encoder type (singleturn or multiturn)	1
	Reserved	2
	Reserved	3
	Selection of the unit for speed transfer	4
		5
	Reserved	6
	Reserved	7

### **Type Code**

